

Important Use and Safety Instructions

- Unplug cable and all connecting equipment from endpin jack when installing or removing batteries.
- Replace the batteries carefully observing polarity.
- When replacing the battery, check for dust or any foreign matter inside the preamp. If found, stop using and consult local dealer.
- When installing the battery cartridge into the preamp, please check for smooth insertion.
- Very high preamp output volume may cause distortion in connecting equipment. Adjust input levels of connecting device if able, or adjust volume control of the preamp as necessary.

Important Instructions for Storage

- Preamp power is engaged as long as output cable is plugged into the endpin jack. Unplug the cable when guitar electronics are not in use.
- Malfunction due to battery leakage is not covered by warranty even during the guarantee period. Select a reliable battery brand and remove them when preamp not in use.

Controls

[FRONT PANEL]

NOTE NAME/TUNING GUIDE LED DISPLAY
Displaying the note name and the tuning guide when tuner turn on.

- Left red LED arrow turn on**
Lower in pitch than the note name displayed in center
- Left/Right green LED turn on**
Tuning was complete to the note name displayed in center
- Right red LED turn on**
Higher in pitch than the note name displayed in center

TUNER POWER SWITCH
This switch works differently when output cable is plugged in and when it is not.
 [Output cable plugged in]
 1st push "Tuner turn on" and "sound mute"
 2nd push "Tuner turn off" and "sound line-out"
 [Output cable not plugged in]
 The switch simple works as toggle switch of "On" and "Off"
 It automatically turns power-off after 5 minutes of silence.

WEAK BATTERY INDICATOR
The red LED turns on when the battery is weak. Please replace the battery upon the LED turned on.

BATTERY CARTRIDGE
Use 006P/9V battery. When installing the battery cartridge into the preamp, please check for smooth insertion and confirm that it is properly firm and fixed. The preamp's master power is engaged when the output cable is plugged into the endpin jack. To prevent the unnecessary battery consumption, please unplug the output cable while not in use.

LOW
Increase and decrease the power of sound in the low range.

MID
Increase and decrease the power of sound in the mid range.

HIGH
Increase and decrease the power of sound in the high range.

VOLUME
Control the amount of volume output from zero to max.

NOTCH
Adjust to reduce feedback by frequency.

[REAR PANEL]

PU INPUT JACK
Connect to Bridge pickup (exclusive for Takamine Original Palathetic Pickup)
Please refrain from touching contacts.

PU GAIN SELECT SWITCH
Selector switch by string type
No need to change as switch is properly selected at the factory.
Please refrain from touching contacts.